

HOW TO USE

KMP6AFSXSEF Cat6a Extra small fully shielded field connector


CABLE PREPARATION

- Strip approximately 40mm of the cable jacket (the foil shielding should be cut to approximately 15mm) and separate the wires into 4 pairs.



WIRE ORGANIZATION


- Insert the wires through the cap and lay them into the correct slots, according to the wiring color coding on the cap. Trim the wires flush with the cap. It is strongly recommended that tip of the wire extends only 0.1mm.

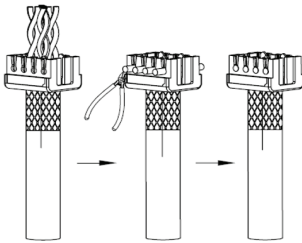

	TIA 568 A	TIA 568 B
1	White / Green	White / Orange
2	Green	Orange
3	White / Orange	White / Green
6	Orange	Green
4	Blue	Blue
5	White / Blue	White / Blue
7	White / Brown	White / Brown
8	Brown	Brown

ADJUSTING TO THE CONNECTOR

- Match the direction of arrows both on the cap and the IDC. Press the cap down onto the IDC and make sure that the wires are deeper than the tiny teeth inside of the IDC slots. Close the outer cap by pushing down both sides until it clicks.

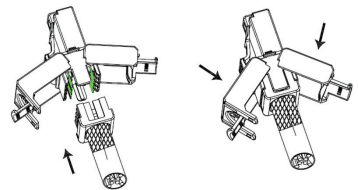

- Finalize the termination by screwing the boot into the body of plug.

